


## AIRQUBE INSTRUCTIONS



### Get the App

1. From the Apple/Android App Store, search and download “Aqi Qube”.
2. Open the app, enter the pass code: 340816
3. Allow “Air Qube” access to the camera.
4. Scan the device QR code on the side of your AirQube.
5. Set user name and email id.
6. Save & Register.

*\*For historical data, click the graph on one of the 10 measured parameters.*

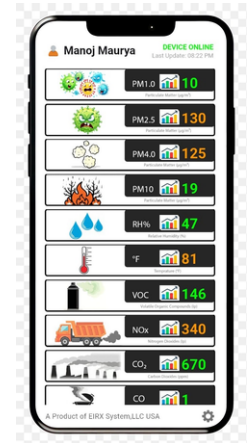

### Set AirQube up on Wi-fi

1. Power on the AirQube.
2. Wait for 10 seconds, until the LED light turns Orange.
3. On your phone or laptop, hook into the wi-fi called “AIR QUBE”. Ignore “Internet may not be available” if prompts.
4. Open the Internet browser on your phone or laptop, enter the following IP address into the **address bar** and press enter. **192.168.4.1**
5. Browser will open a page titled “Air-Qube Wifi Setup”. Select your wi-fi, enter your wi-fi password at the bottom and press “submit”.
6. **The light on your AirQube should turn green.** The device is now connected to wi-fi. Allow 20 minutes to get the sensor climatized and ready to access the dashboard. Now that your device is on wi-fi, you can plug it in anywhere in the building that picks up wi-fi.
7. **If the light does not turn green, repeat the steps above.**
  - a. You may need to re-select “AIR QUBE” in your wi-fi settings.
  - b. You may have multiple options in the browser “Air-Qube Wifi Setup” for your home wi-fi. Repeat the steps above and try another one of the options with your wi-fi name.

\* AirQube can only connect to one wi-fi at a time. If you want to move it to another location, repeat steps above at new location & wi-fi.